

Menu Structure

Main Menu	Installation	1. Antenna Setting	Transponder		
			LNB Power		
			LNB Type		
		2. Automatic Search	22KHz		
			Switch Type		
			Option		
		3. Manual Search	Frequency		
			Polarity		
			Symbol Rate		
			Code Rate		
			Scan Mode		
			Network Search		
		RID Search			
		4. Factory Reset	Delete all Channels		
		5. USALS Setup	Set my Longitude and Latitude		
	Service Organizing			1. Channel Propertiees	Fav & Lock
	STB Setting			1. Output Setting	TV Type
					TV Screen Mode
				2. RF Setting	RF Channel Number
				3. Parental Lock	Password
					Password Option
				4. Language Setting	Menu Language
					Audio Language 1
				Audio Language 2	
				Subtitle Language 1	
				Subtitle Language 2	
				AC3	
			5. Other Setting	Time Offset	
				Teletext Transparency	
				OSD Transparency	
STB Status				Model ID	
				Usage Type	
				H/w Version	
				S/w Version	
				Loader Version	
CAS		Embedded CAS			

Dream Satellite Television, Shanghai Service Center

Updated: 20060320

Tel: +86-21-2730 9851

Email: Support@dreamsatellite.com

Website: www.dreamsatellite.com