

KAON K270 Satellite Receiver Configurations

20110927


Welcome page, set Menu language as English, press "OK" to confirm.




Set Audio language as English




Set subtitle language as English

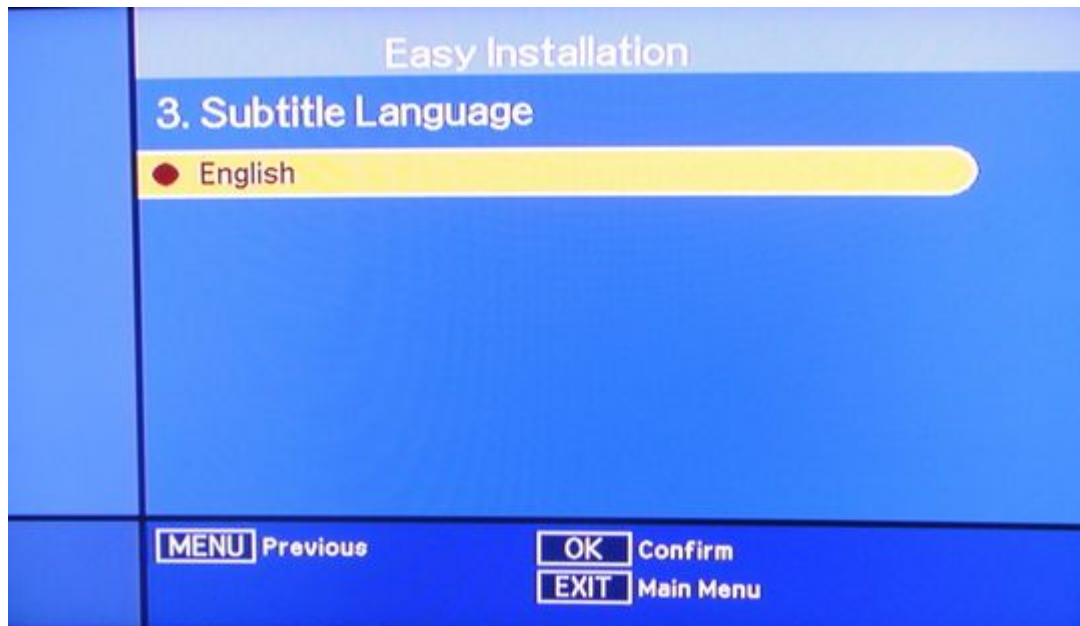


Set time as GMT:8:00

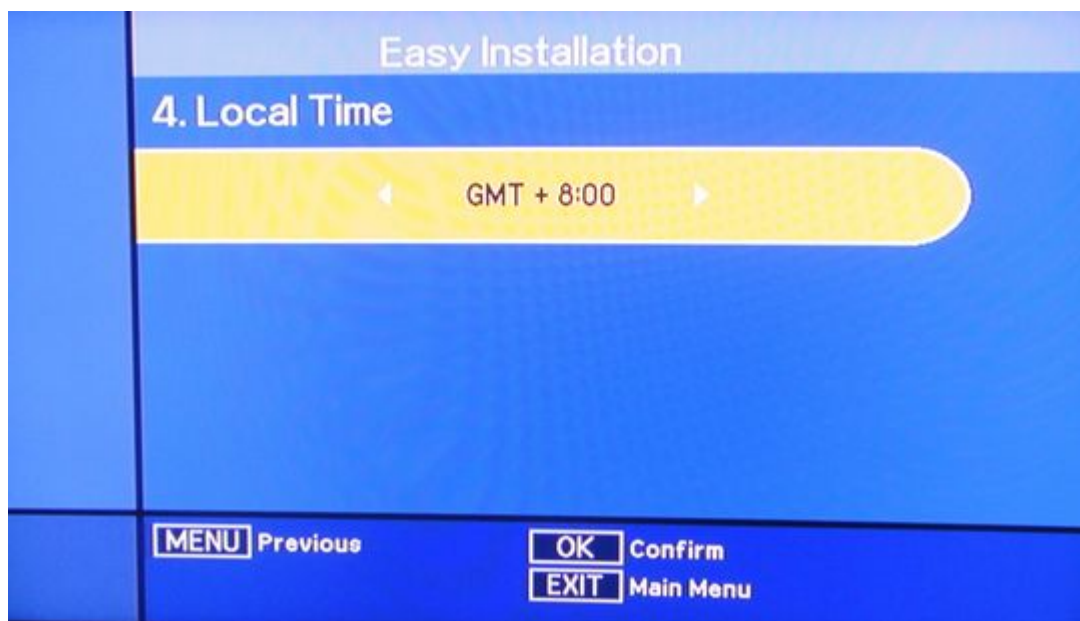


Now it's time to do the channel search, before you are sure your LNB Type has been set as 11300 to match the dish antenna LNB number, I suggest you to do "EXIT" first.

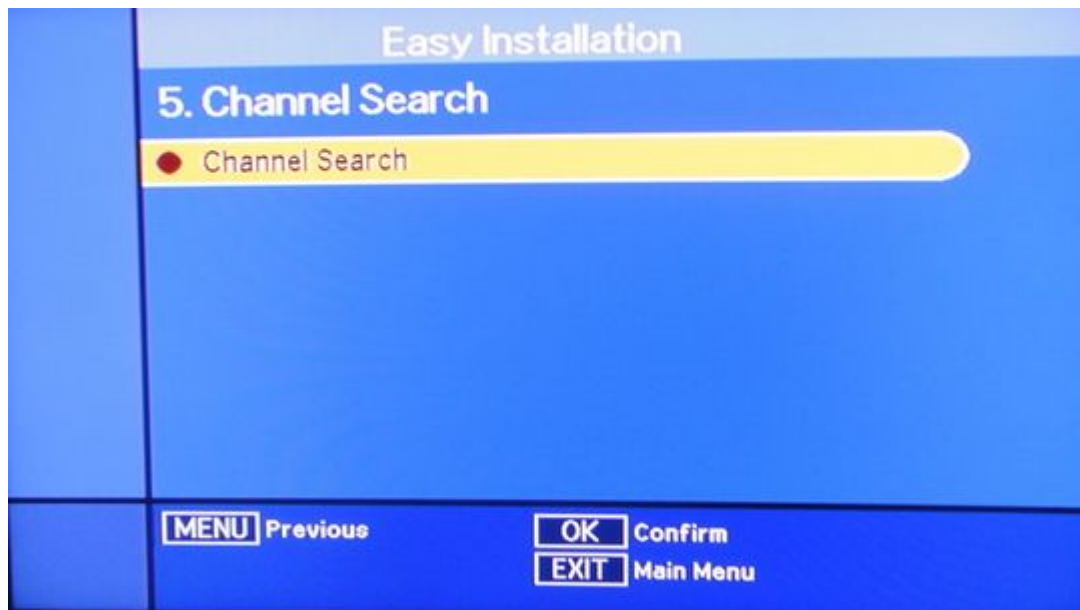


Press "Menu" on your remote, select "Installation", you will find the following page:

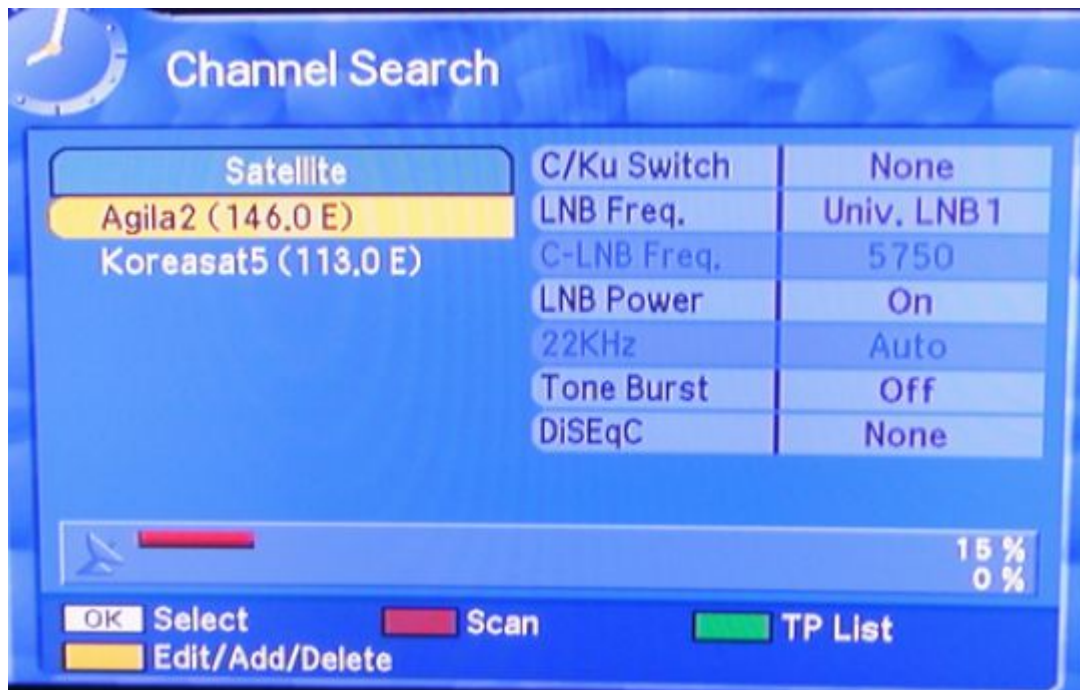


Move the cursor to KoreaSat5. (Dream migrated to 113E since summer of 2010)

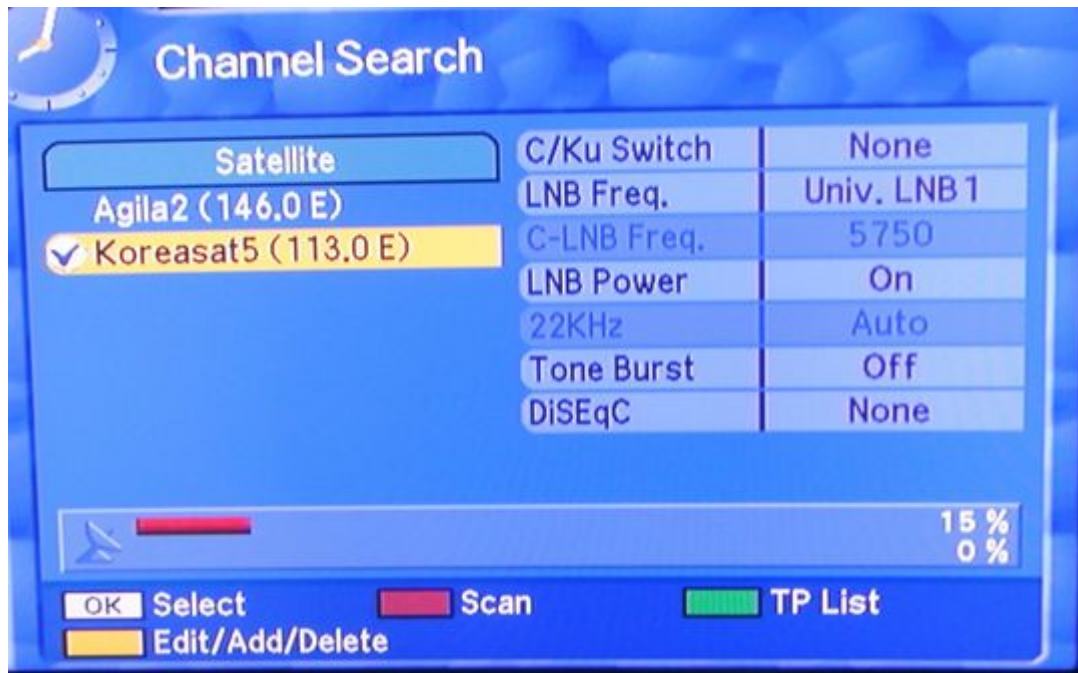


Move the cursor right to C/Ku Switch, keep it as None.

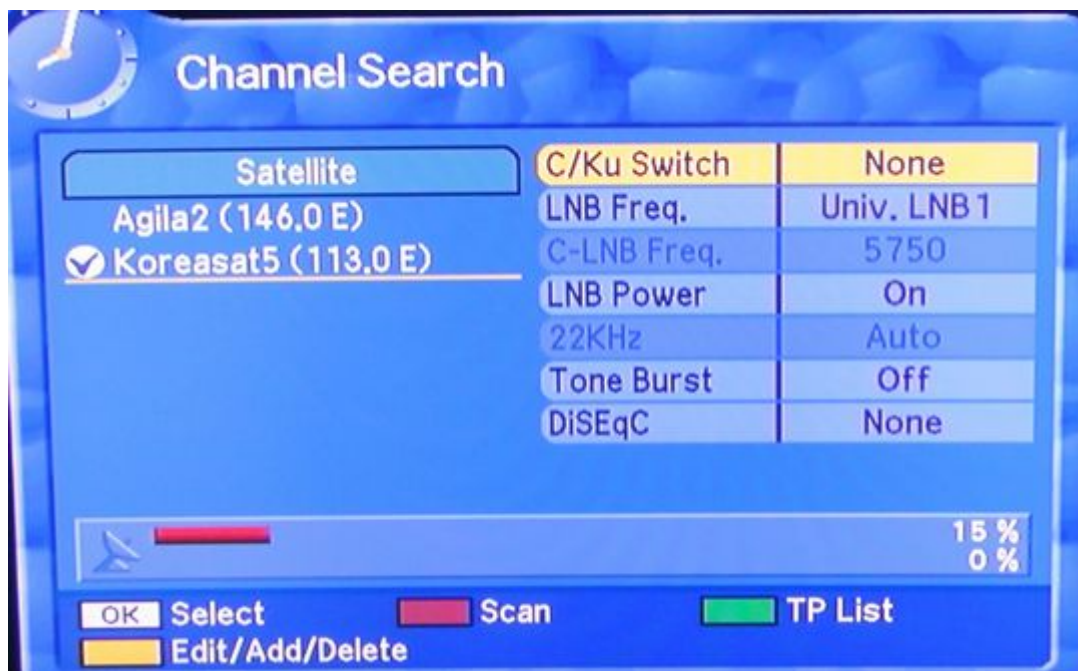

Move cursor to LNB Freq., press "OK", you will find a list of different LNB Freq. Numbers. In China most of the dish antennas use LNB Type as of 11300, one very stable LNB type.

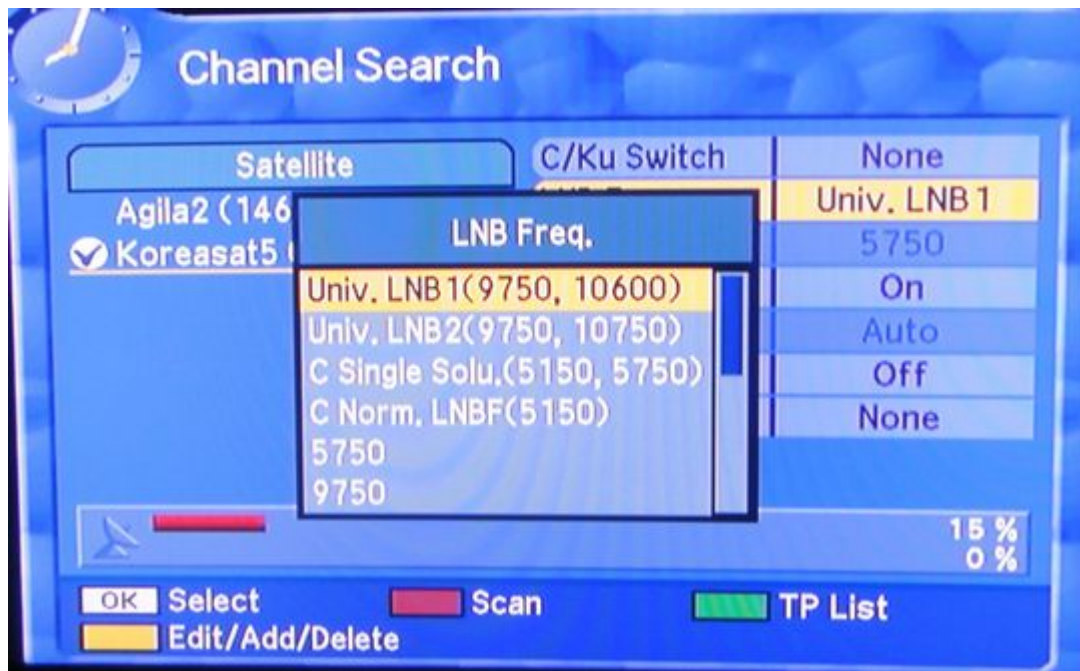


In China most of the dish antennas use LNB Type as of 11300, one very stable LNB type. Keep it on 11300 and press "OK" to confirm it

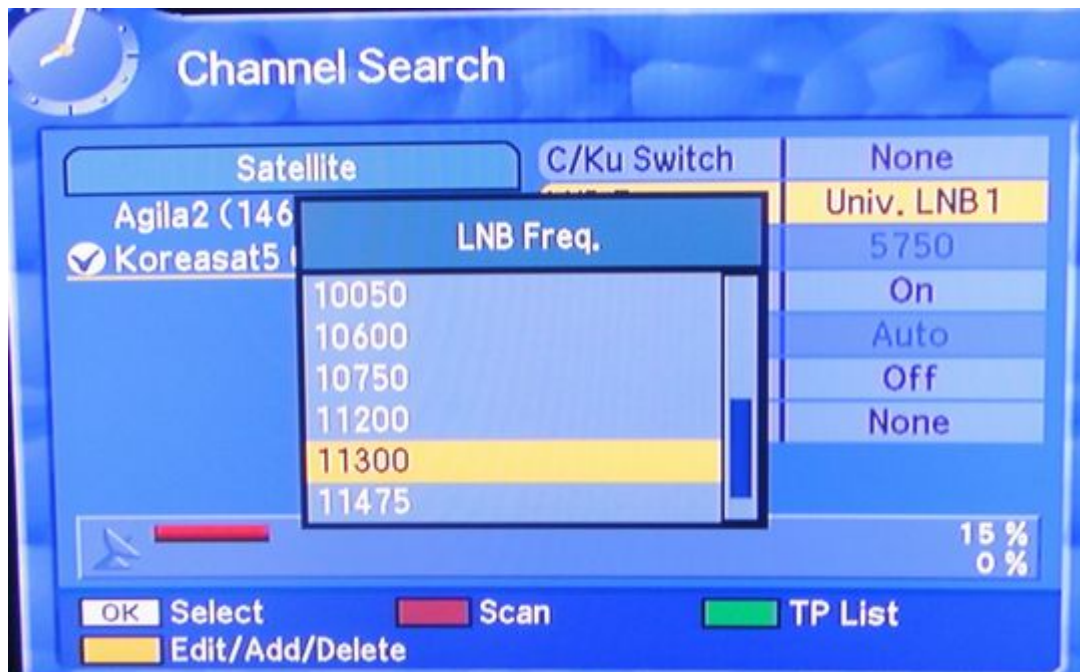

Now you will find the two satellite signal bars show some colors to you. The first bar is Signal Strength, should be around 90%, the second bar is Signal Quality, should be beyond 80%, to have a stable signal reception in China.




Now it's time to do the SCAN. Red button on your remote means SCAN, press it.

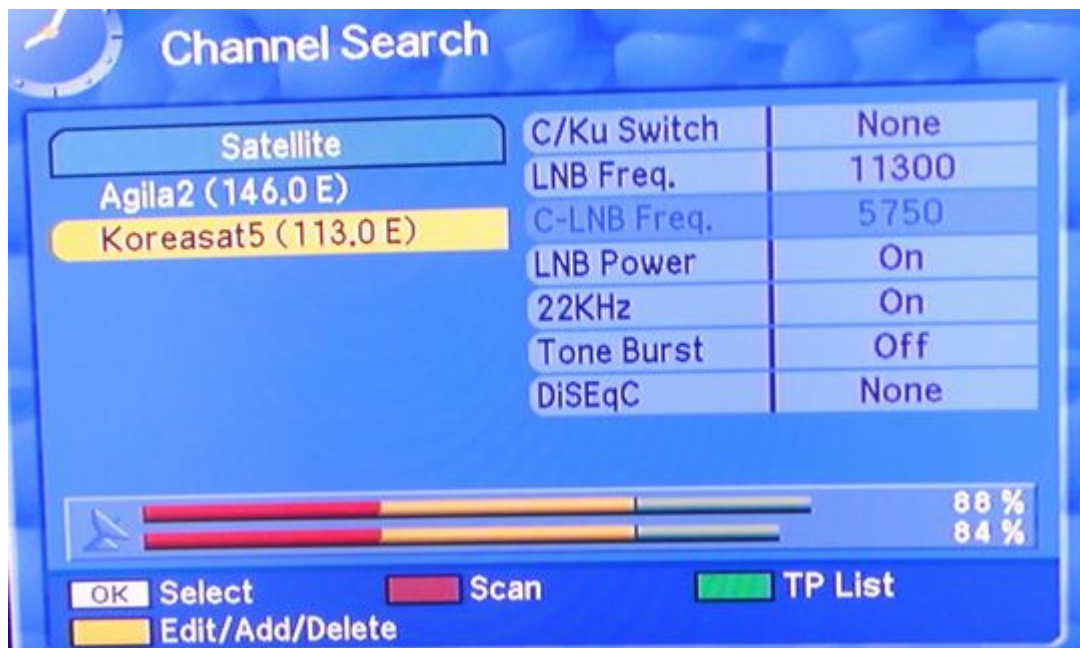

After press the red button, you will see the following options, change Network scan to be On.




Now the network scan is On. Press "OK" button to go on.

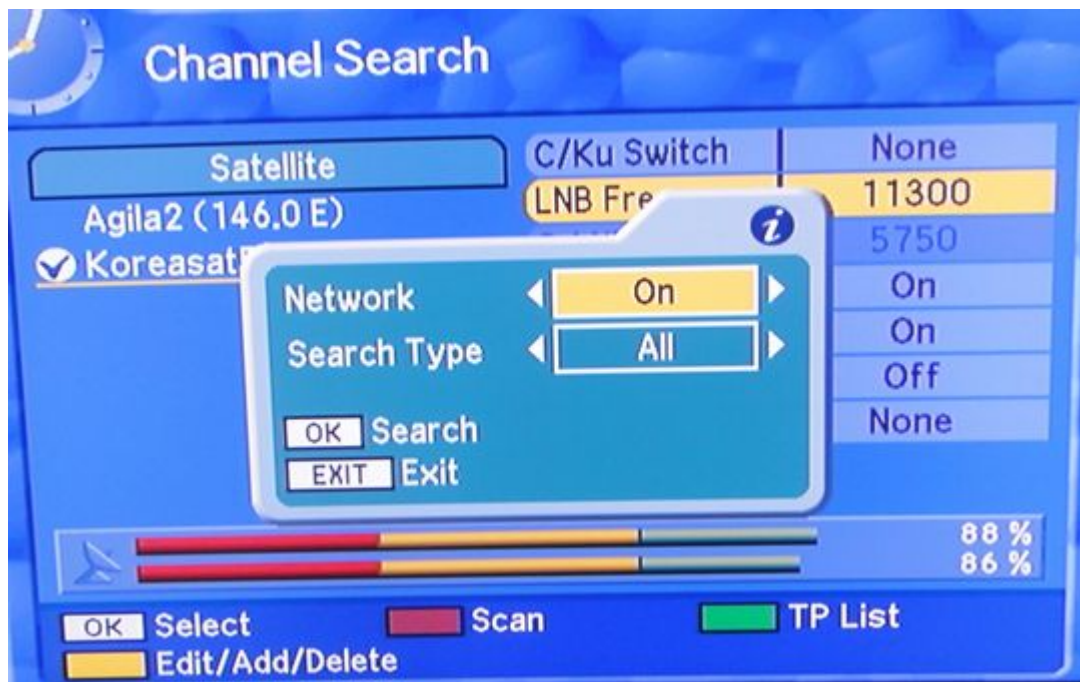

This is when the search is in process.




After it's done itself you are going to find TV List 38 channels and Radio list of 10 channels. Press OK button to confirm the search.

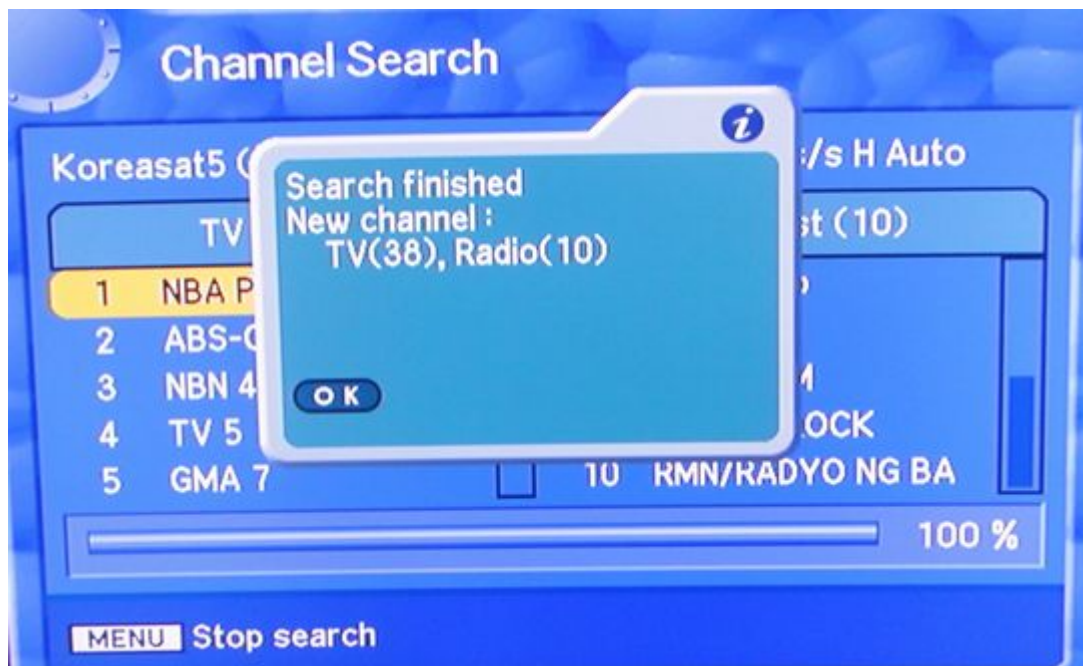

After that the yellow cursor is on channel one, which is TV Maria as of date 20110926.
(Sorry the picture was taken before the changes). Press OK to confirm it.



Press OK button again to confirm that you want to save the channels.

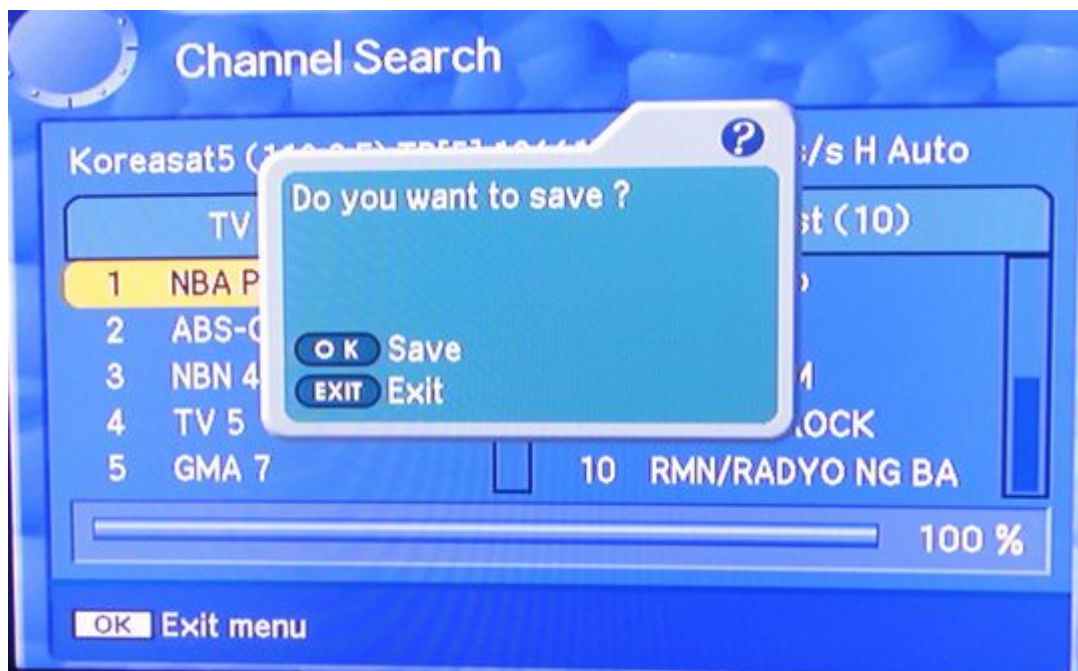


After saving the above channels press EXIT to leave the searching page. Press OK button you will see the channel list. Go to channel 1 or 11, they suppose to be working because they are free to air channels, for people to check if dish signal is fine



Channel 11 has been Living Asia for quite a while. Whenever you have this channel working, it means your dish antenna is in good condition.




If you see the following page, it means your smartcard has not been paired up you're your receiver, the unit has not been activated. Keep box on and contact us for unit activation.

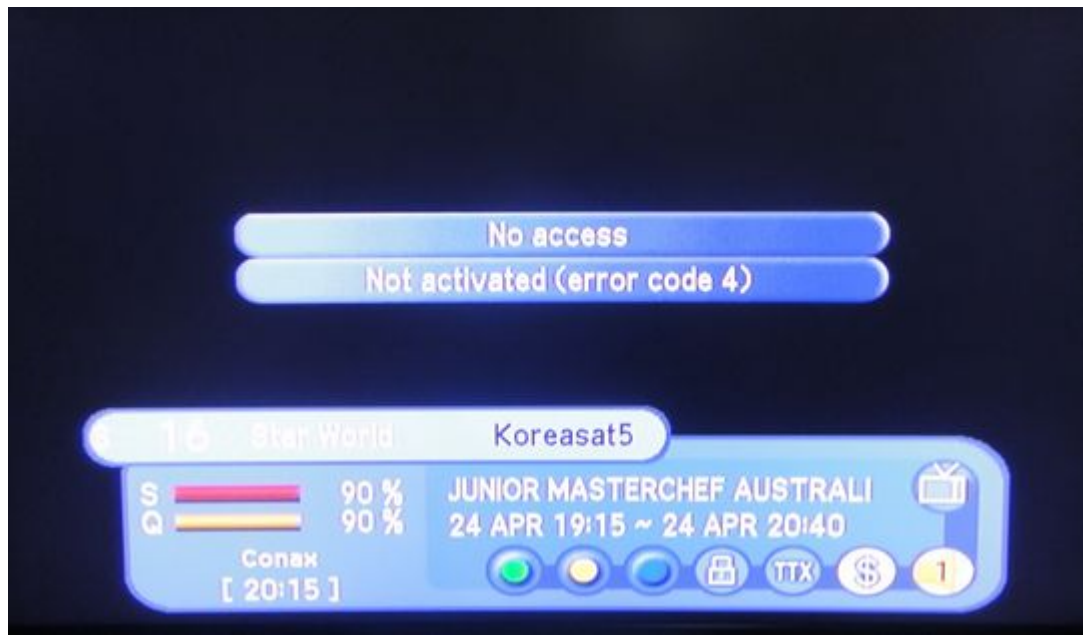

Where is the smart card? It's here. We do not recommend you to open the lid and take out the card to read the number. You can find it on the TV screen as well.



Press Menu on your remote you will find the following page, move cursor to CA System, press OK button on it.

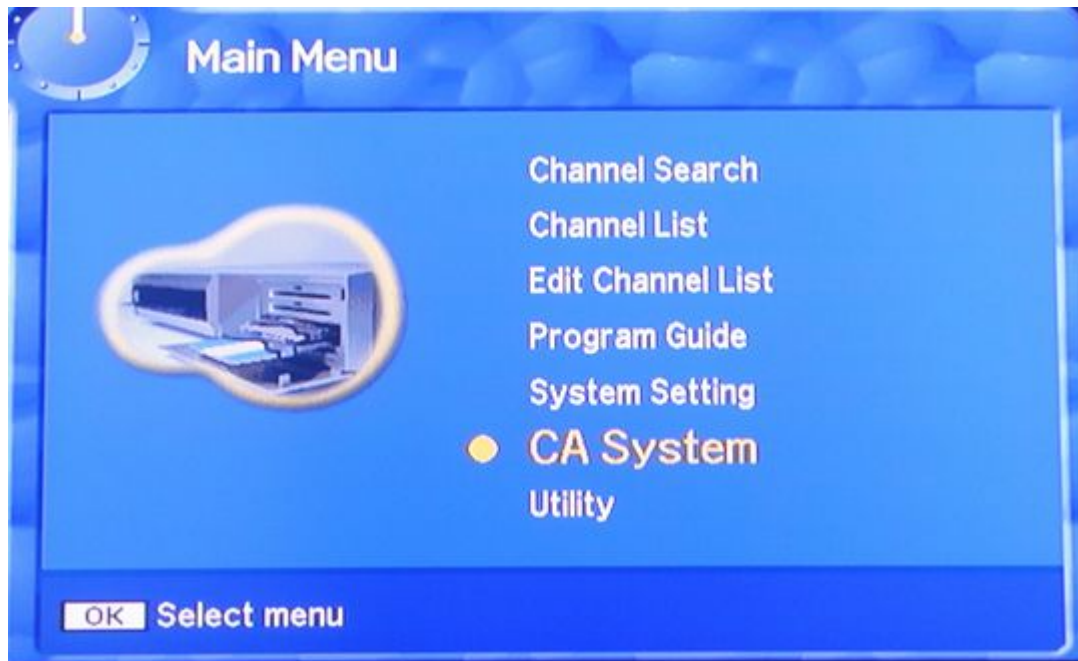

You will find second tier options, move yellow cursor to About Conax CA, you will find the smart card number, like 02 0592 12XX XX, save it in case you need it the other day.

