



Setting up the Parental Lock:

FOR DIGITAL-ALL WORLD UNITS:

Your Receiver is equipped with an Electronic Program Guide (EPG). This will help you become more familiar with the various features and options of the program guide. The program guide can be activated by pressing the **G UIDE** button on your remote control unit.

1. The EPG screen provides an overview of twenty-four (24) hour program channel lists and schedules with up to seven days of programming information.
2. Programs may be selected by moving the highlighter over the program guide and press **OK**.
3. The information for the selected program will be displayed on the screen located in the Upper right hand corner. The program name and time will be displayed.
4. Each program entry contains the event name, rating, start /end time.

- Current Program
- Picture
- Program
- Information
- Current
- Highlighted
- Program
- Time Grid
- The upper left hand screen displays the selected channel.
- Pressing / the Left & Right Arrow buttons allows the viewer to switch between programs of the same channel.
- Pressing / the Up & Down Arrow buttons allows the viewer to switch between channels in the list.
- The **PAGE UP/ PAGE DOWN** buttons allow for you to scroll up/down to the previous and next pages.
- Press the **EXIT** button to clear the screen and return to TV viewing mode.

FOR VISTAR UNITS:

The Parental Control feature allows you to select Rating Controls. The Parental Control Menu allows you to modify personal preference settings. In order to access this function you will require your 4 digits Access Code (PIN). The default code is "1234" and can be changed by

referring to the parental control section. This function is used for parents to block certain channels that are not suitable for viewing by children. To choose a menu option, use the (Up) and (Down) buttons to move the cursor to the feature you wish to change.

Note. Please contact DREAM customer services at Tel.# 021-2730 9851 to reset your parental code back to default 1234