



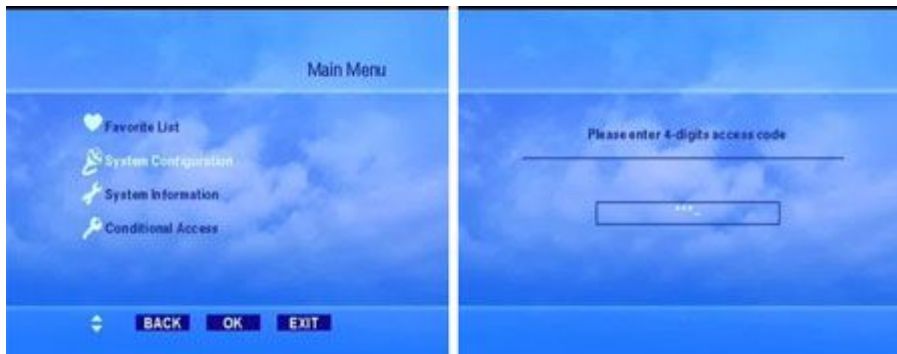

1. Press "menu" on remote control, select "system configuration" and press "ok".
2. Enter 4-digit "access code", default is "1234".

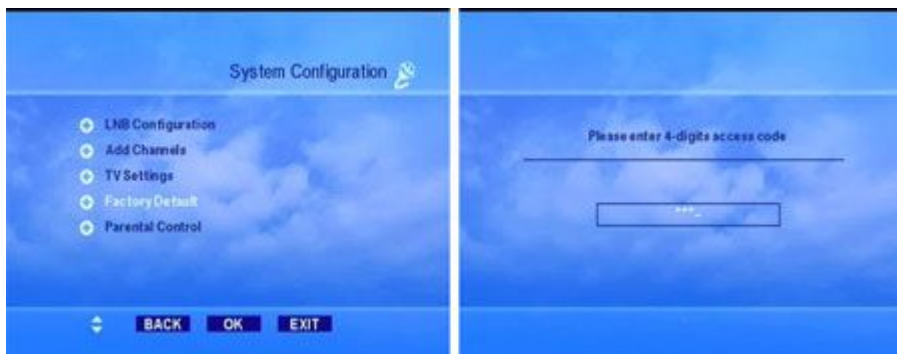

3. Select "factory default" and press "ok".
4. Enter 4-digit "access code", default is "1234".



5. A prompt will appear, "do you want to reset receiver?", press "ok".
6. The "welcome" prompt will appear, press "ok".



7. The "LNB configuration" window will appear on the screen. Enter the following parameters and press "ok".

Antenna - 2

LNB Power - Yes

DisEqC/Tone Burst - Disable

8. The "Add channels" window will appear, enter the following parameters under "Default 02" and press "ok".

Frequency - 12390000

Symbol Rate - 25600

Polarization - 14V

Search Type - Transport



9. Press "ok" to search channels. The message "Searching in process, please wait" will appear. After search is completed, press "back" on remote.

10. The "Add channels" window will appear again, under Satellite select "Default 02" and enter the following parameters under "TP2". Press "ok".

Frequency - 12430000

Symbol Rate - 25600

0/22 KHz - ON  
Polarization - 14V  
Search Type - Transport



11. Press "back" on remote. The "Add channels" window will appear again, under Satellite select "Default 02" and enter the following parameters under "TP3". Press "ok" to save.

Frequency - 12430000  
Symbol Rate - 25600  
0/22 KHz - ON  
Polarization - 14V  
Search Type - Transport

12. Press Exit to Finish.

